







Quick Installation Guide

If you have any problems with this product please contact our technical support team before returning it to the store .

Wireless Presentation System with Dual Band AC2100 Router

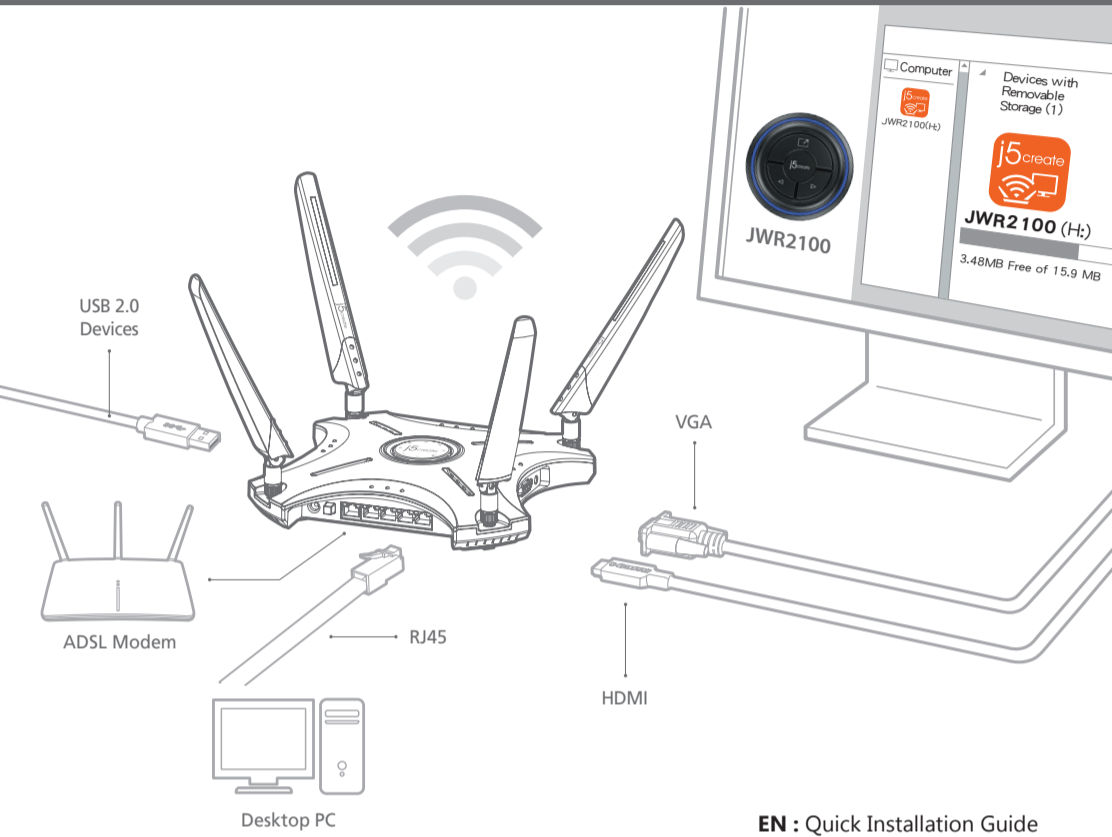

EN : Quick Installation Guide
TC : 快速安裝手冊

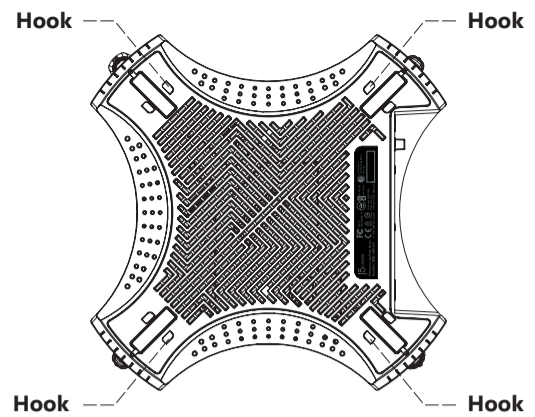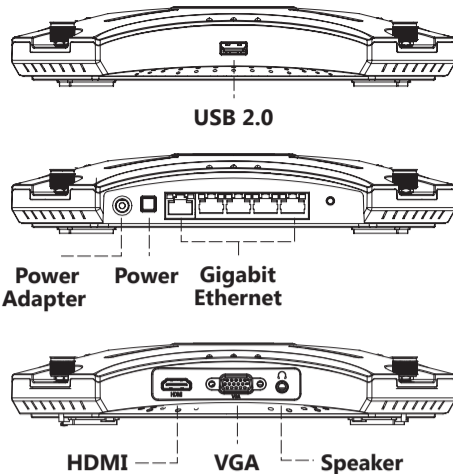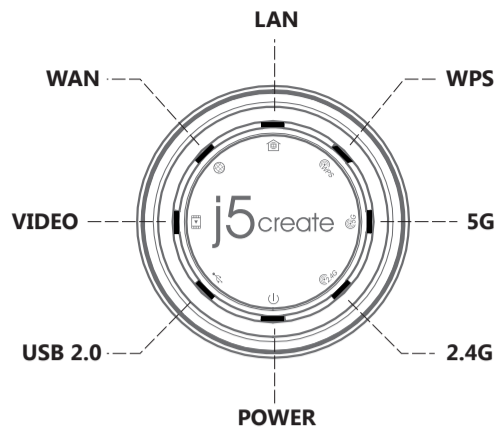

Accessory installation 配件安裝方式


- Step 1** Insert the JWR2100 power adapter into the DC IN port and press the power button.
- Step 2** Install the four antennas, in any order, into the antenna jacks.
- Step 3** Connect the RJ45 network cable to the JWR2100 LAN Port and the other end to the LAN PORT of your host/laptop. Confirm that the LAN indicator on the JWR2100 is flashing.

- 步驟一** 將JWR2100電源變壓器插入 DC IN孔，按下POWER鈕。
- 步驟二** 把四根天線(不分序)轉緊到天線插孔上。
- 步驟三** 將RJ45網路線插上JWR2100 LAN Port上，另一端則與您的主機/筆電的LAN PORT連接，此時確認JWR2100的LAN指示燈為閃爍狀態。

JWR2100 network settings wizard JWR2100網路設定精靈


Step 1
Open your browser, type 10.10.10.254 in the browser address bar. Then enter the user name and password.
User name: admin/Password: Password

步驟一
打開你的瀏覽器，在瀏覽器網址列上打上10.10.10.254，出現登入視窗，請輸入預設登入帳號與密碼。
帳號：admin / 密碼：password

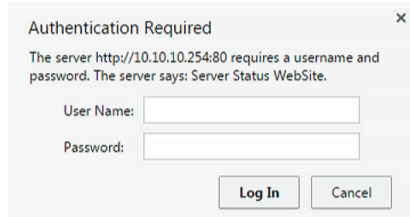


Step 2
Enter the network settings wizard, you have to change the router's password the first time you login, then click "Next".

步驟二
進入網路設定精靈，第一次登入請您務必更改路由器預設登入密碼，修改完後請按下一頁。

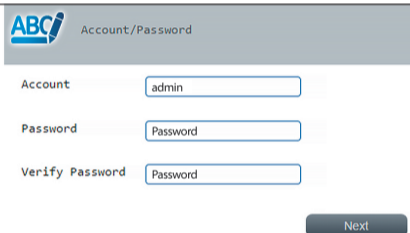


Step 3
Set your country's time zone and press "Next".

步驟三
請設定您所在國家時區後按下一頁。

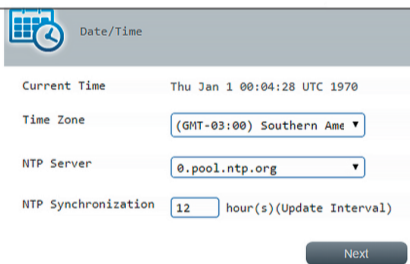


Step 4
External network settings. Please use the network settings provided by ISPs. Then press "Next".

步驟四
外部網路設定
請使用ISP業者所提供網路設定值，設定完畢之後請按下一頁。

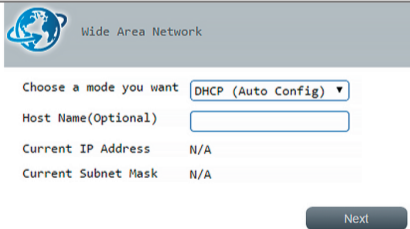

Step 5
Internal network settings. Adjust according to your individual needs, then press "Next".


步驟五
內部網路設定
可依個人需求調整，建議使用預設值，確認後請按下一頁。

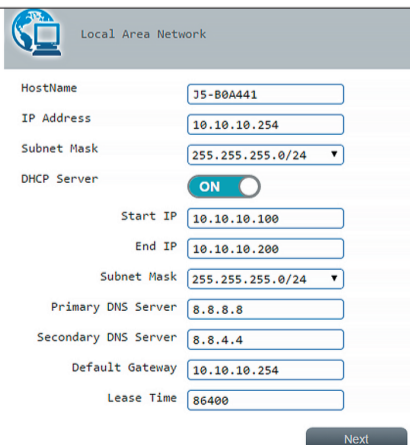

JWR2100 network settings wizard JWR2100網路設定精靈


Step 6
Wireless network settings can be adjusted according to individual needs, it is recommended that you modify the SSID and verify the password, then press "Finish" to confirm.

步驟六
無線網路設定
可依個人需求調整，建議修改預設SSID及驗證密碼，確認之後請按完成。

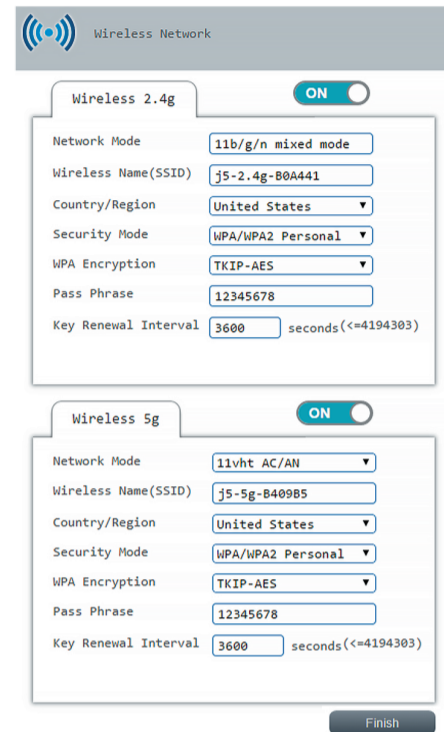


JWR2100 Remote Display settings mode 設定方式

- Step 1** Plug in the HDMI or VGA cable from the external screen to the JWR2100 display port and confirm the SSID and password of the JWR2100 Remote display connection. The default password is hidden. To reveal the password, go to the Network Settings Wizard to change the settings.
 - Step 2** Link your Android/iPhone/Windows/Mac OS device's wireless signal with the JWR2100 Wi-Fi SSID. Refer to the SSID and password displayed on the output screen. (The external screen will display the SSID and password. The first time you connect it will show the default password as 12345678).
 - Step 3** Windows/Mac installation: connect the JWR-BTN (Key Pad) to the JWR2100 and go to Computer>Launch App in the pen drive. After the installation has completed, you are ready to use the wireless projection function via the Key Pad. Android/iOS installation: Go to Google Play or the App Store and search for and download the JWR2100 app. After the App has downloaded you are ready to use the wireless projection function.
- 步驟一** 連接外接螢幕的HDMI或VGA線至JWR2100的顯示埠，從顯示螢幕中確認JWR2100 Remote display連線的SSID與密碼。預設Password為隱藏，可至網路設定精靈設定顯示Password。
- 步驟二** 將Android / iPhone / Windows / Mac OS裝置的無線訊號連線至JWR2100 Wi-Fi的SSID，請參考輸出螢幕上所顯示的SSID與密碼（外接螢幕即顯示下圖Remote Display 2.4g & 5g的SSID，首次連接將顯示預設密碼12345678）。
- 步驟三** Windows / Mac安裝：請將JWR2100所附的Key pad插入至電腦，並至我的電腦開啟J5資料夾並啟用JWR2100檔案，安裝完成後即可透過Key pad使用無線投影功能Android / iOS安裝：請至Google play或 App store搜尋 " JWR2100 " App，下載App後安裝執行，即可啟動無線投影功能。

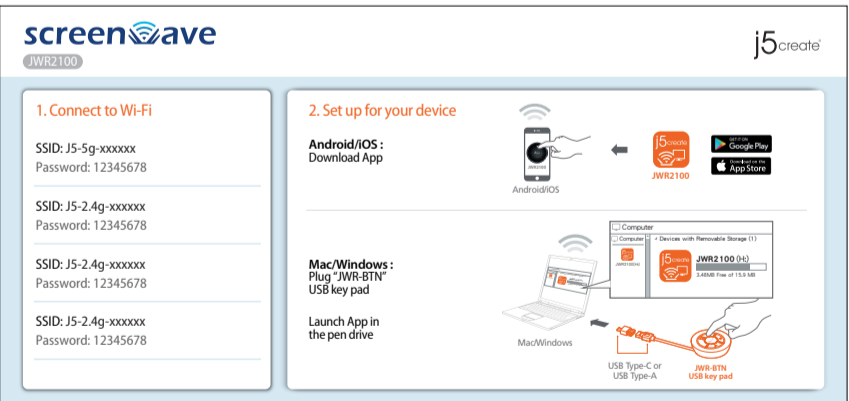

- ※ Note: The JWR2100 will be the main output for the HDMI screen when VGA and HDMI are displayed at the same time.
- ※ 注意：JWR2100 VGA與HDMI 顯示埠同時，會以HDMI為主要輸出螢幕
- ※ If the antivirus software prevents the Key Pad program from being launched, set the anti-virus program to "allow execution", then the Key Pad program can be launched normally.
- ※ 如防毒軟體誤判導致KeyPad程式無法執行，請將防毒程式設定為"可允許執行"KeyPad程式即可正常執行

JWR-BTN description JWR-BTN說明

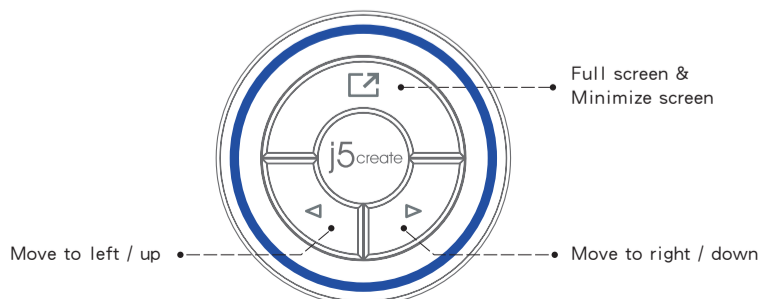

JWR2100 Firmware Update Process 更新方式

- Router firmware upgrade: click the JWR2100 system interface, then click on system management to upgrade your firmware. If there is a firmware update message, click "online update" to upgrade your firmware. The router will automatically reboot once the upgrade is complete.
- JWR-BTN update: when the JWR-BTN is connected to the router it will automatically detect if a new firmware version is available. If available, please click "Update" when prompted.
- APP update: when using the Android/iOS system, if the App detects that a newer version is available, then it will update automatically. If you have any questions during the update process, please do not hesitate to contact customer service on the j5create official website.
- JWR2100本機韌體升級：點選系統管理→升級韌體，如出現韌體更新訊息，請點選"線上更新"升級路由韌體，更新後，路由器將自動重新開機完畢後即完成升級。
- JWR-BTN更新：在Windows/MacOS執行JWR-BTN時，如出現提示更新訊息，請點選"更新"更新完畢後即完成升級流程。
- APP更新：當您在Android/iOS系統下使用時，如APP偵測到APP新版本將會自動更新。如在更新過程中有任何問題，請至j5create官方網站參考使用手冊或與客服工程師聯繫。