



JCD392 Steam Deck 充電問題更新 Fw (共有四個步驟)



1. 把產品插入電腦 TYPE-C 口
2. 按兩下"**usb_bb_dialog**"打開右邊的燒錄視窗。

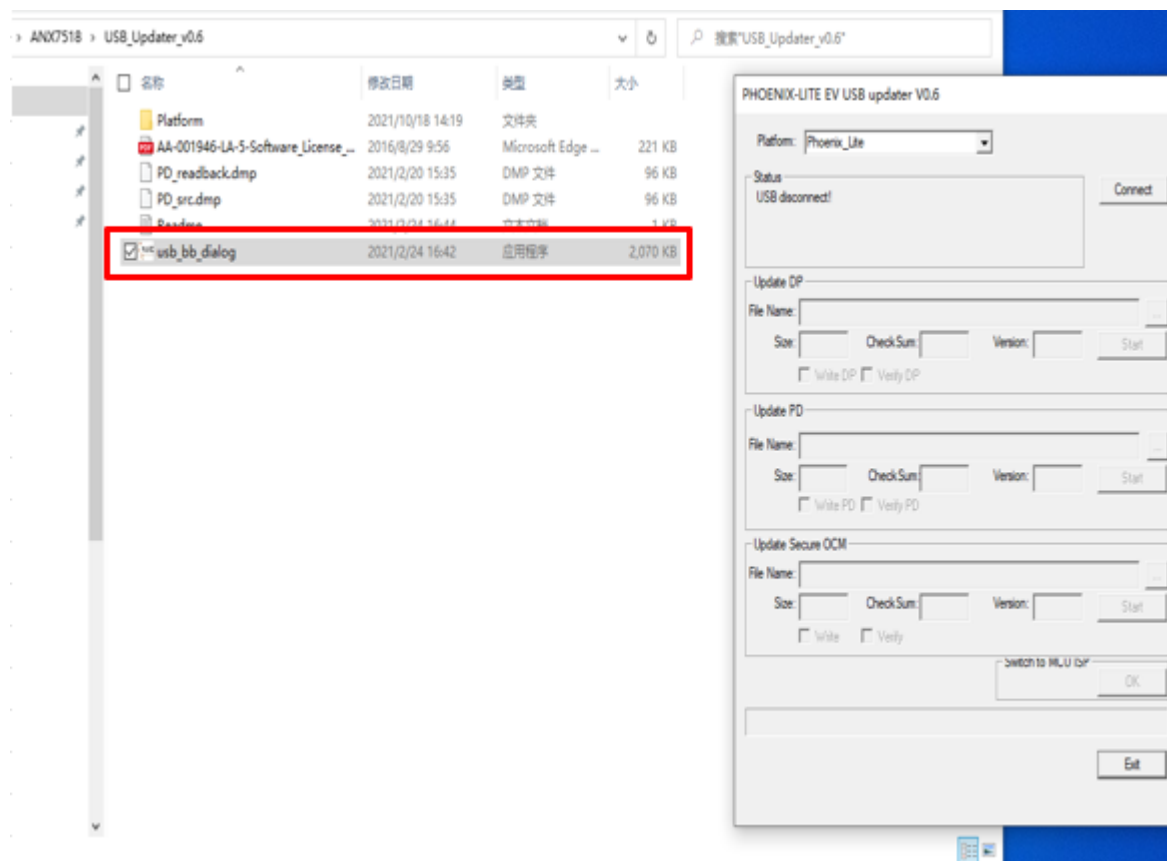


3. 按"**Connect**",查看 **Status** 視窗識別到晶片資訊才能燒錄。

 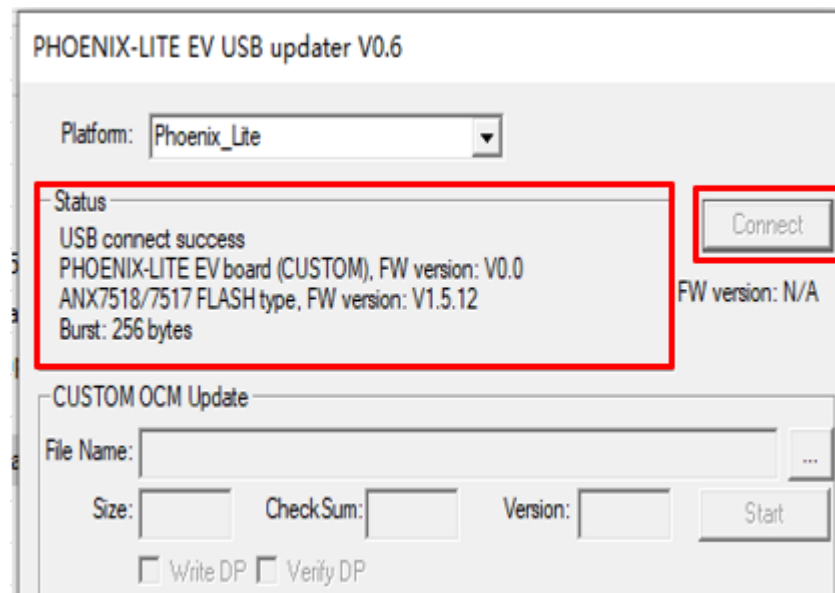



4. 點 **CUSTOMOCM Update** 視窗中的"..."選擇 **Fullink_1156_7518_2lane_dongle cust_15W_2022_0906.hex** 更新檔。

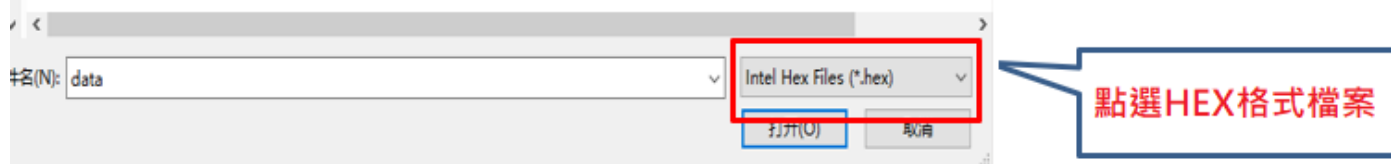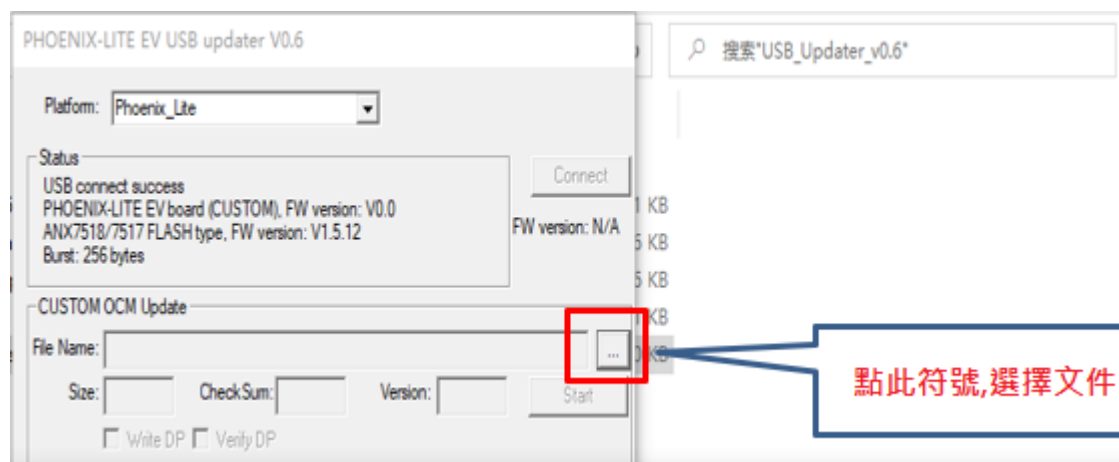


5. 依照下列步驟開始執行第一個韌體更新流程直到結束為止

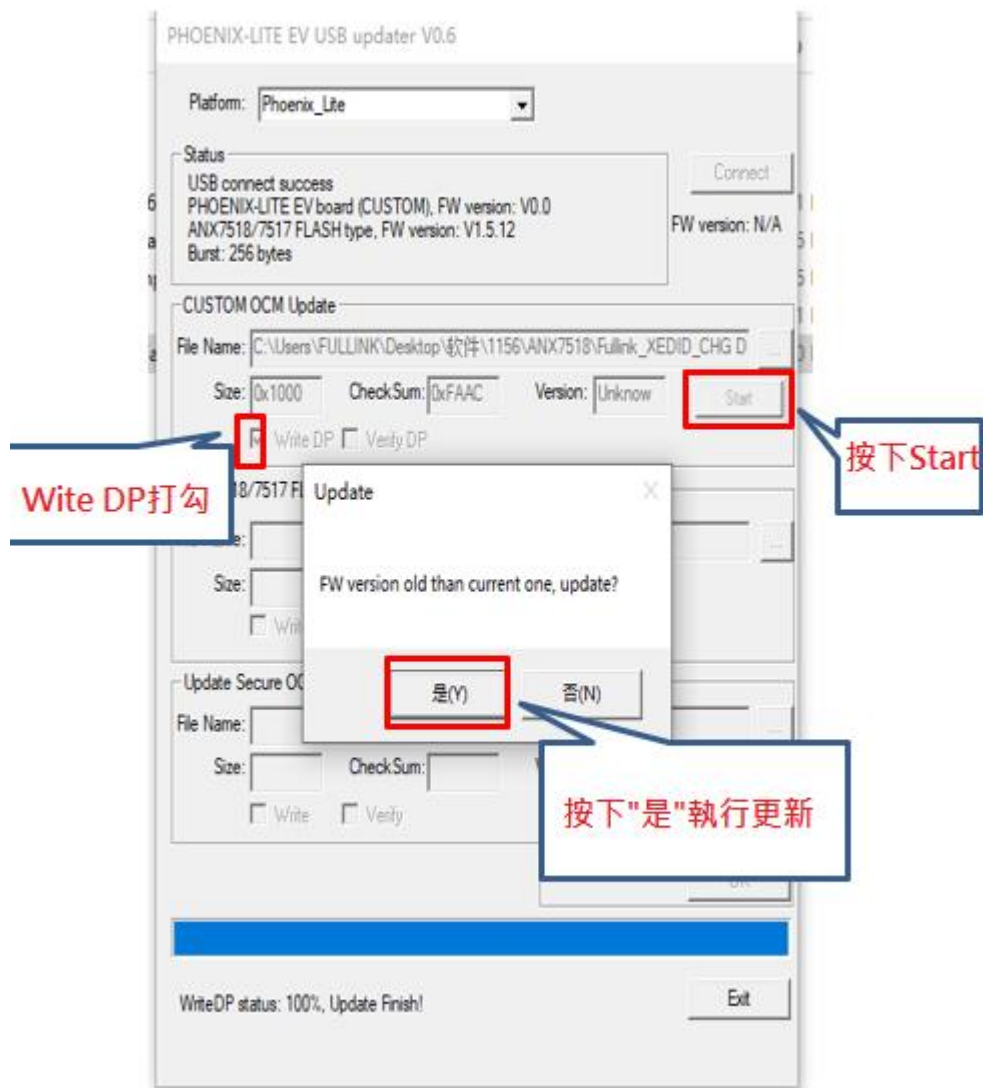


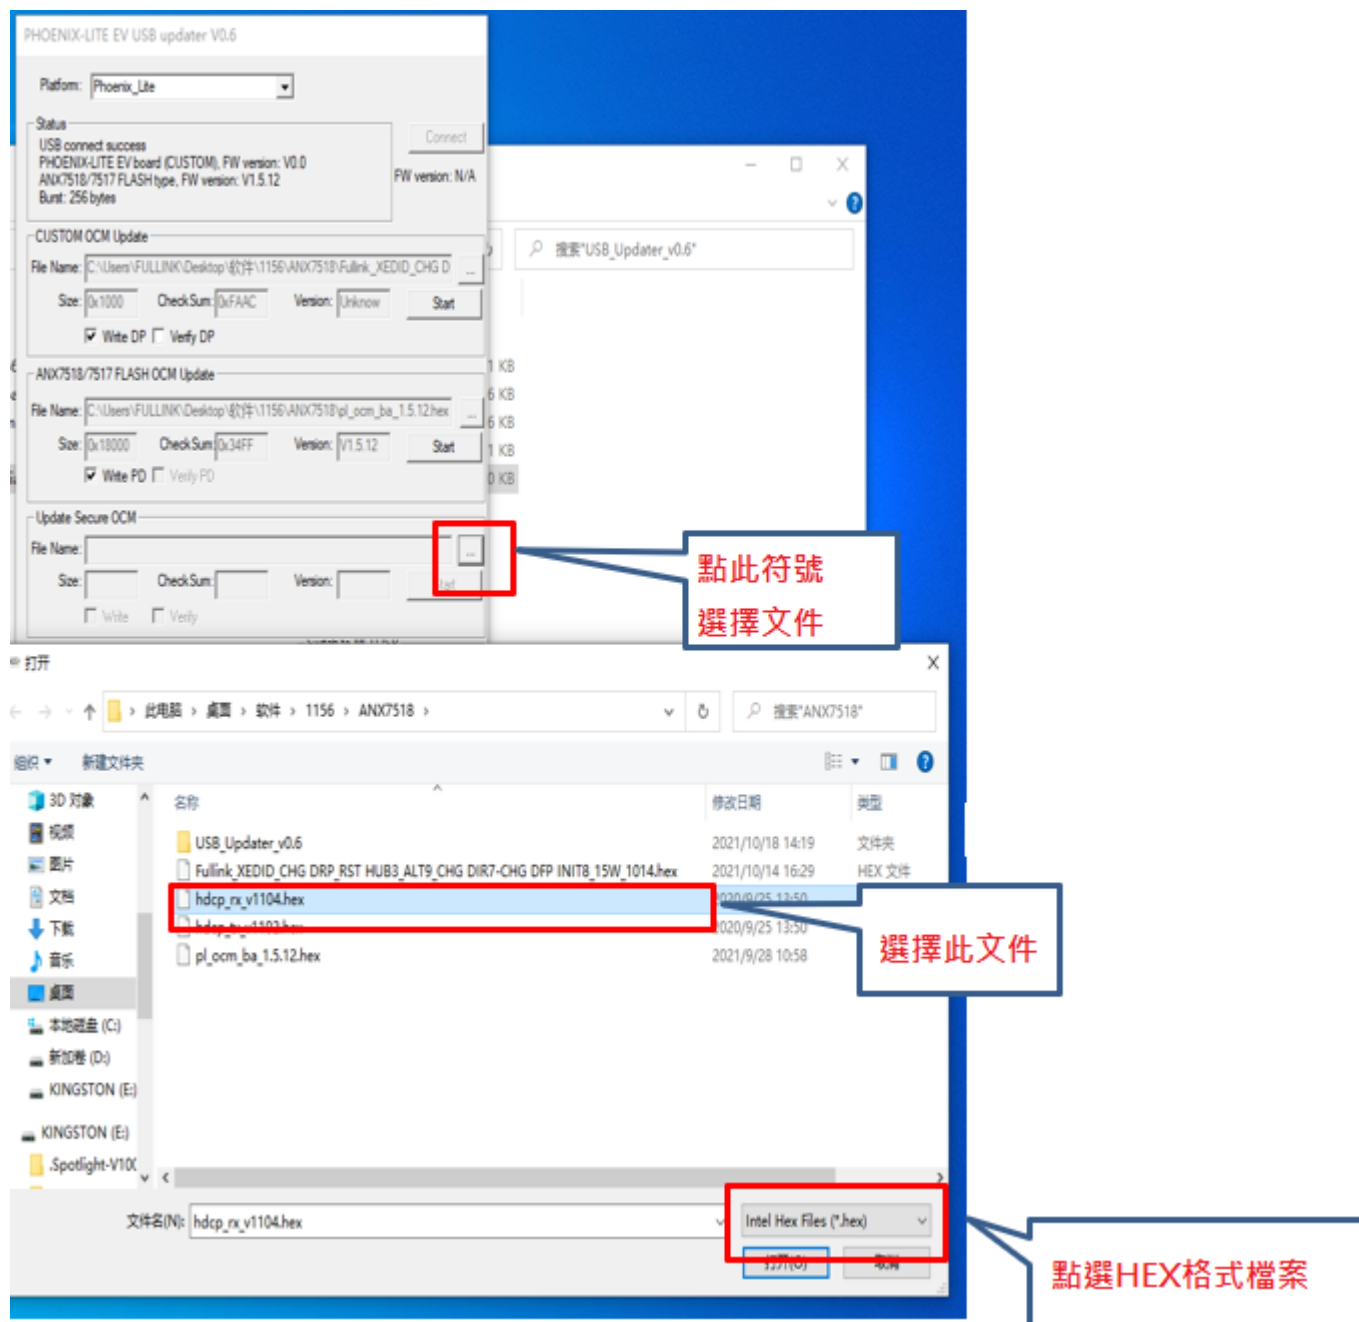
6. 上一個步驟更新完畢之後繼續下一個更新步驟，點選 **ANX7518/7517 FLASH OCM Update** 視窗中的  選擇指定的更新檔“**pl_ocm_ba_1.5.16.hex**”

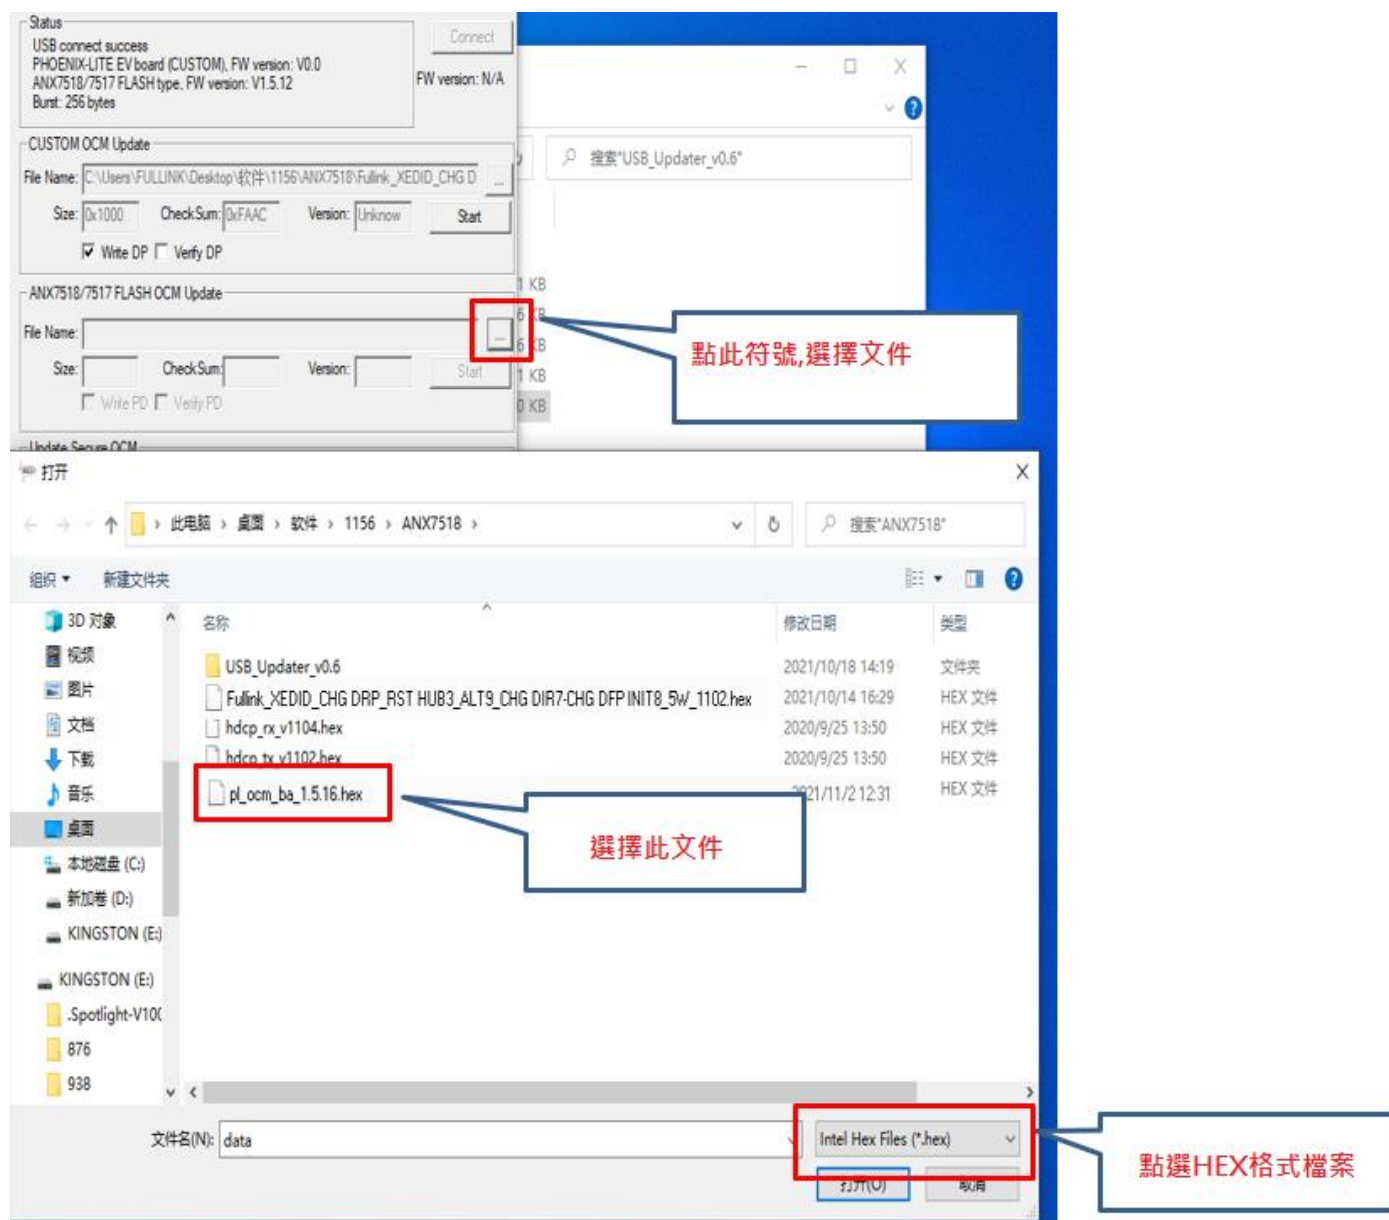

7. 依照下列步驟開始執行第二個韌體更新流程直到結束為止

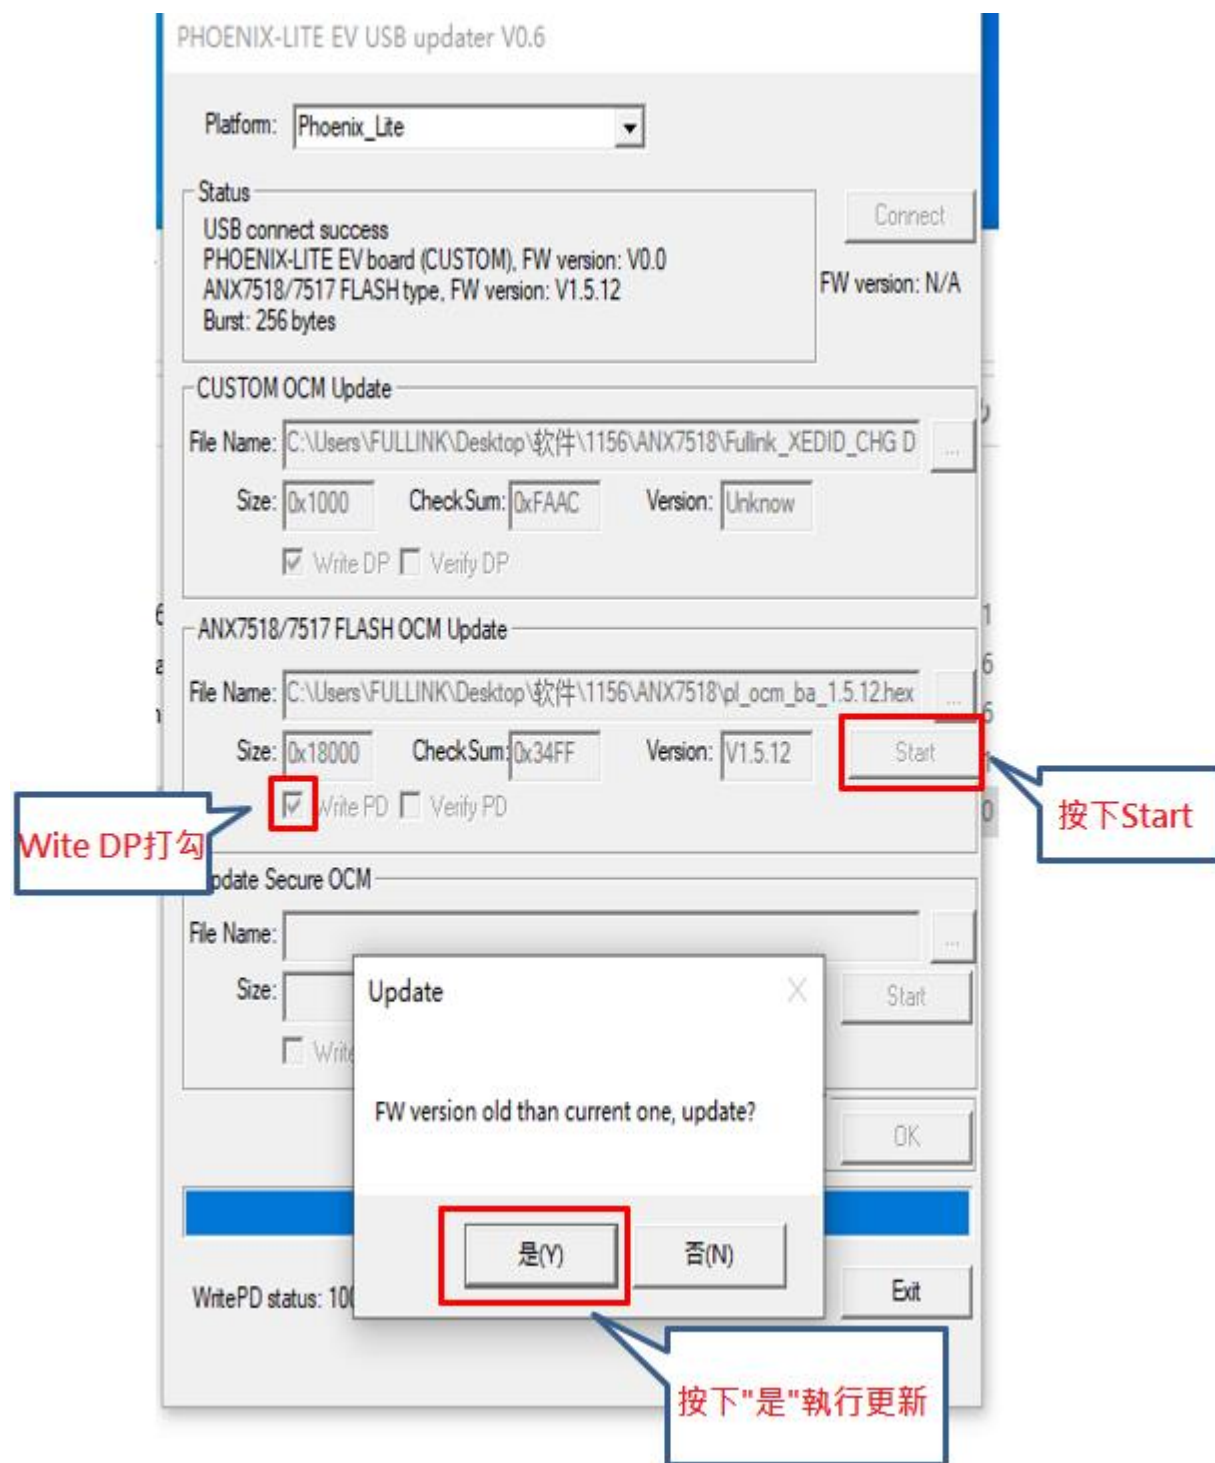

8. 點 **Update Secue OCM** 視窗中的  "選擇指定的更新檔。



9. 依照下列步驟開始執行第三個韌體更新流程直到結束為止

PHOENIX-LITE EV USB updater V0.6

Platform: Phoenix_Lite

Status
USB connect success
PHOENIX-LITE EV board (CUSTOM), FW version: V0.0
ANX7518/7517 FLASH type, FW version: V1.5.12
Burst: 256 bytes
FW version: N/A

Connect

CUSTOM OCM Update
File Name: C:\Users\FULLINK\Desktop\软件\1156\ANX7518\Fullink_XEDID_CHG.D
Size: 0x1000 CheckSum: 0xFAAC Version: Unknow
☒ Write DP ☐ Verify DP

ANX7518/7517 FLASH OCM Update
File Name:
Size: CheckSum: Version:
☐ Write PD ☐ Verify PD


Update Secure OCM
File Name: C:\Users\FULLINK\Desktop\软件\1156\ANX7518\hdcp_rx_v1104.hex
Size: 0x3000 CheckSum: 0x1BD8 Version: V1104
☒ Write ☐ Verify
Start

Switch to MCU ISP
OK

WriteSecreOCM status: 33%
Exit

按下Start開始燒錄

10. 點選 **Update Secue OCM** 視窗中的"..."選擇指定的燒錄檔。

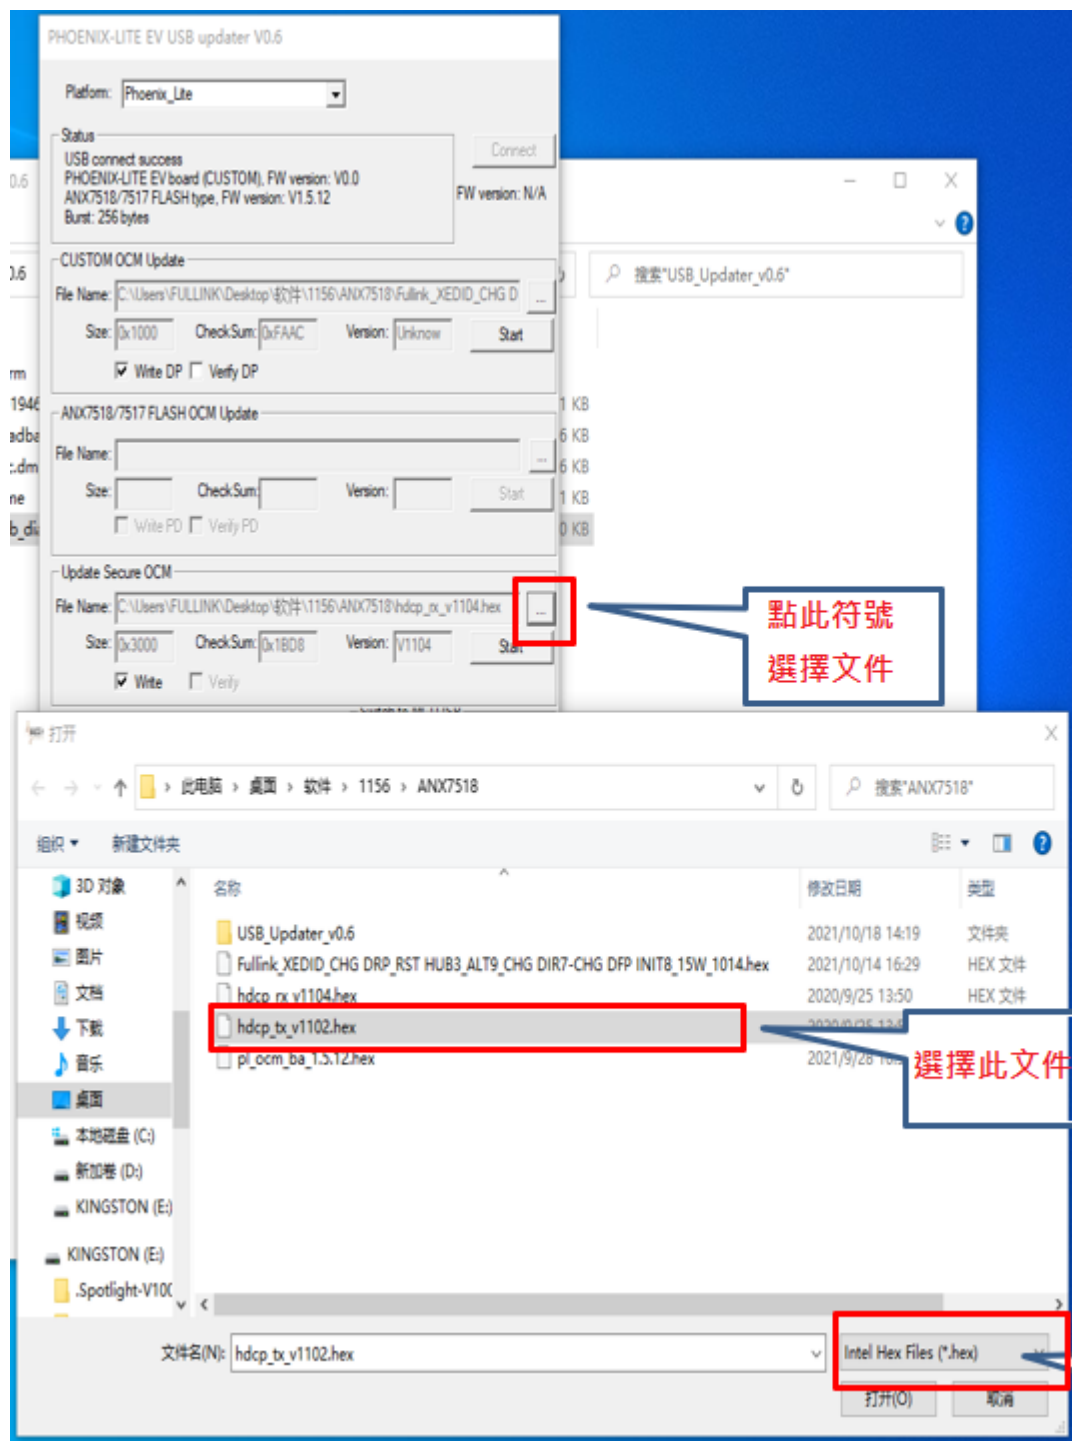

11. 依照下列步驟開始執行第四個韌體更新流程直到結束為止

PHOENIX-LITE EV USB updater V0.6

Platform: Phoenix_Lite

Status
USB connect success
PHOENIX-LITE EV board (CUSTOM), FW version: V0.0
ANX7518/7517 FLASH type, FW version: V1.5.12
Burst: 256 bytes
FW version: N/A
Connect

CUSTOM OCM Update
File Name: C:\Users\FULLINK\Desktop\軟件\1156\ANX7518\Fullink_XEDID_CHG D
Size: 0x1000 CheckSum: 0xFAAC Version: Unknown
☒ Write DP ☐ Verify DP

ANX7518/7517 FLASH OCM Update
File Name:
Size:
CheckSum:
Version:
☐ Write PD ☐ Verify PD

Update Secure OCM
File Name: C:\Users\FULLINK\Desktop\軟件\1156\ANX7518\hdcp_tx_v1102.hex
Size: 0x3000 CheckSum: 0x2F8F Version: V1102 Start
☒ Write ☐ Verify

Switch to MCU ISP OK

WriteSecreOCM status: 35% Exit

1 KB
6 KB
6 KB
1 KB
0 KB

按下Start
開始燒錄

12. 以上 4 個更新檔燒錄完成後，拔下產品重新插上，點選"**Connect**"
韌體版本為：V1.5.16 即代表更新流程完畢

PHOENIX-LITE EV USB updater V0.6

Platform: Phoenix_Lite

Status
USB connect success
PHOENIX-LITE EV board (CUSTOM), FW version: V0.0
ANX7518/7517 FLASH type, FW version: **V1.5.16**
Burst: 256 bytes

FW version: N/A

Connect

CUSTOM OCM Update

File Name: C:\Users\FULLINK\Desktop\软件\1156\ANX7518\Fullink_XEDID_CHG.D ...

Size: 0x1000 CheckSum: 0xFAAC Version: Unknown Start

☒ Write DP ☐ Verify DP

ANX7518/7517 FLASH OCM Update

File Name: ...

Size: CheckSum: Version: Start

☐ Write PD ☐ Verify PD

Update Secure OCM

File Name: C:\Users\FULLINK\Desktop\软件\1156\ANX7518\hdcp_tx_v1102.hex ...

Size: 0x3000 CheckSum: 0x2F8F Version: V1102 Start

☒ Write ☐ Verify

Switch to MCU ISP OK

WriteSecreOCM status: 100%, Update Finish! Exit